




Variable Text

- Step 1- Create your txt file and save it in the Apex/Work folder.
- Step 2- Set up your job as desired.
- Step 3- Select the line you wish to insert with variable text.
- Step 4- Click on the Text I beam (see Fig. 1).

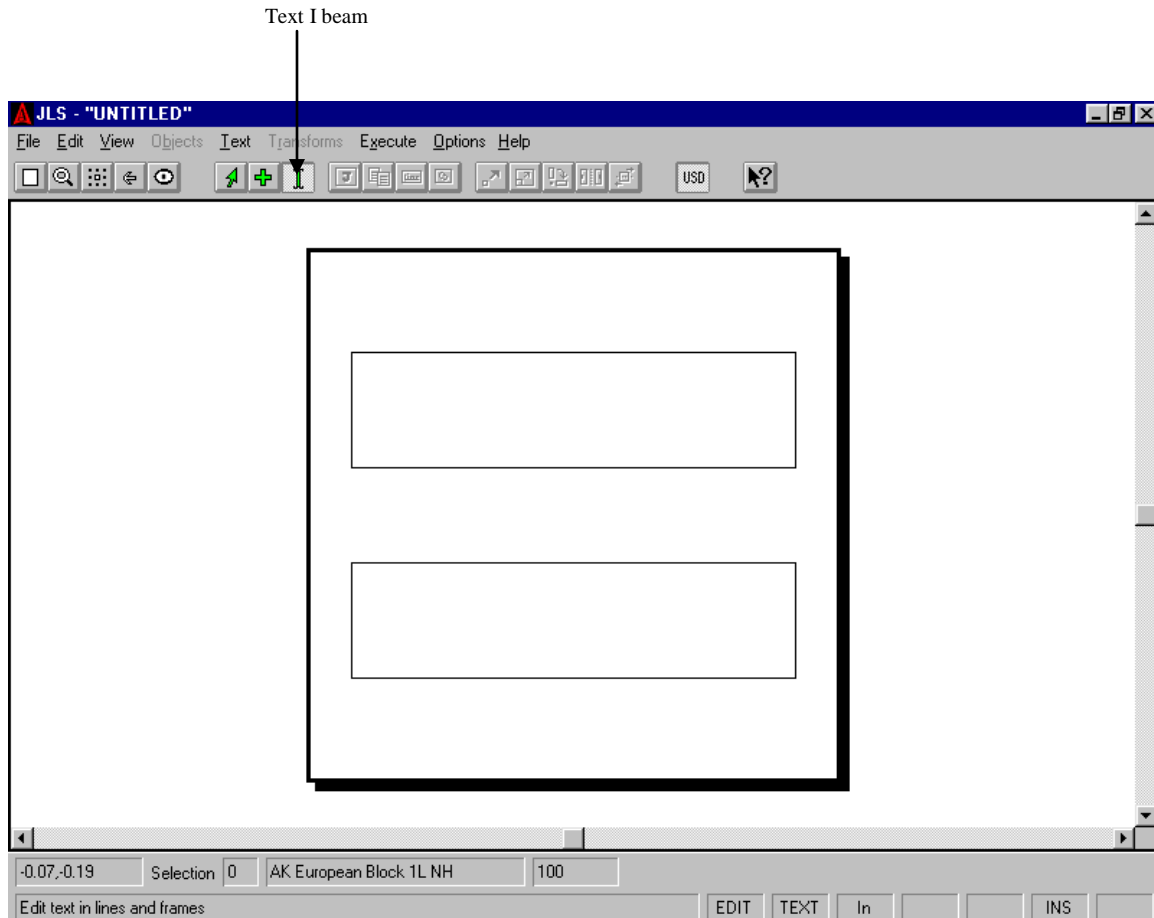

(Fig. 1)

- Step 5- Click on text and then variable text
- Step 6- Highlight the txt file you wish to use, the contents will show to the right.
- Step 7- Highlight the line in the txt file you want to start with.
- Step 8- Set the increments as desired (i.e. If you have two separate lines of variable text you will want to set the increments to 2. After you have set up line 1 you will have to set up line 2 by repeating steps 3 – 8).
- Step 9- You can now go to the Job Attributes and matrix the job as needed.